


# Installation and User Instructions

## RSP CONIC

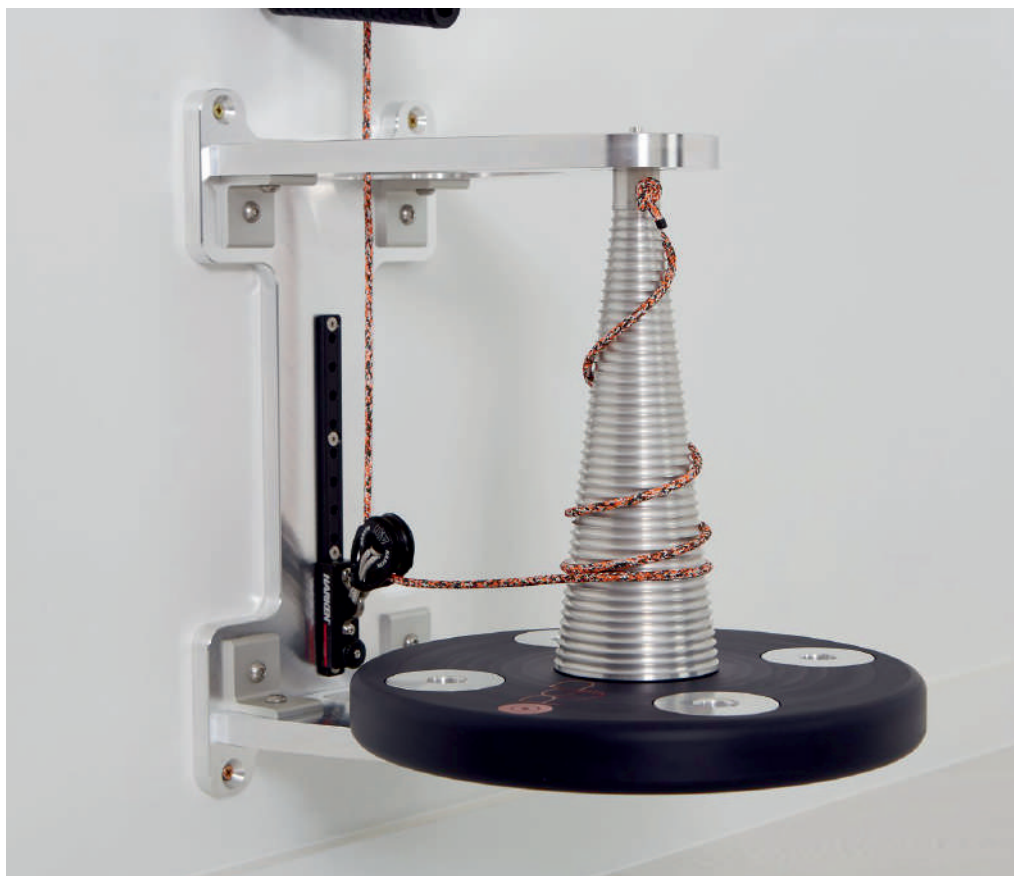

MADE IN SPAIN  
Inercial Performance S.L.  
[www.einercial.com](http://www.einercial.com)

## Table of Contents

Introduction.....	3
Standard equipment.....	3
Installation.....	4-6
Adjusting The Handle Position.....	7
Adding Weights to the Flywheel .....	7-8
How to move the rail.....	8
Different angles to pull the rope.....	9
Technical Specifications.....	9
Accessories.....	10
Use.....	10
Maintenance.....	11
Replacing the Rope.....	11
Warranty.....	11

## INTRODUCTION

The main characteristic of the Conical Pulley, due to the cone's nature, is that the movement is accelerated with progressive weight. The rope's radius decreases as it moves across the cone, progressively increasing resistance.

The nature of the weight is inertial, that is, depending on how much power the user applies to the machine, power values will be higher or lower. This feature wide range of use of the subject, since we always work on percentages of individual power of the user. We can practice a great variety of exercises, making it possible to train every muscle group from a single machine by attaching different accessories to the end of the rope. Moreover, this machine's weight range is really wide.

We increase weight by working over the free cone radius with a roll-up rope, and also by shifting the inertia moment using 4 integrated masses on the disk (they can be extracted).

The wider the radius, the lighter the weight; and the narrower the radius, the heavier the weight. This regulation is performed through a lengthwise rail along the cone.


The moment of inertia is adjusted through the different masses integrated within the disk. There are three possible positions.

## STANDARD EQUIPMENT


- RSP Conic chassis
- 120cm wall rail for height adjustment of the output pulley
- Ground anchorage eyebolt for vertical shooting
- 4 aluminium masses
- Carbo Harken pulley 40mm Ø
- Carbo Harken pulley T2 Loop 40mm Ø
- 4 meters of high performance rope with length regulator
- Hand grip and ankle strap
- Assembly manual
- Wall mounting kit

## INSTALATION

### Parts of the machine.

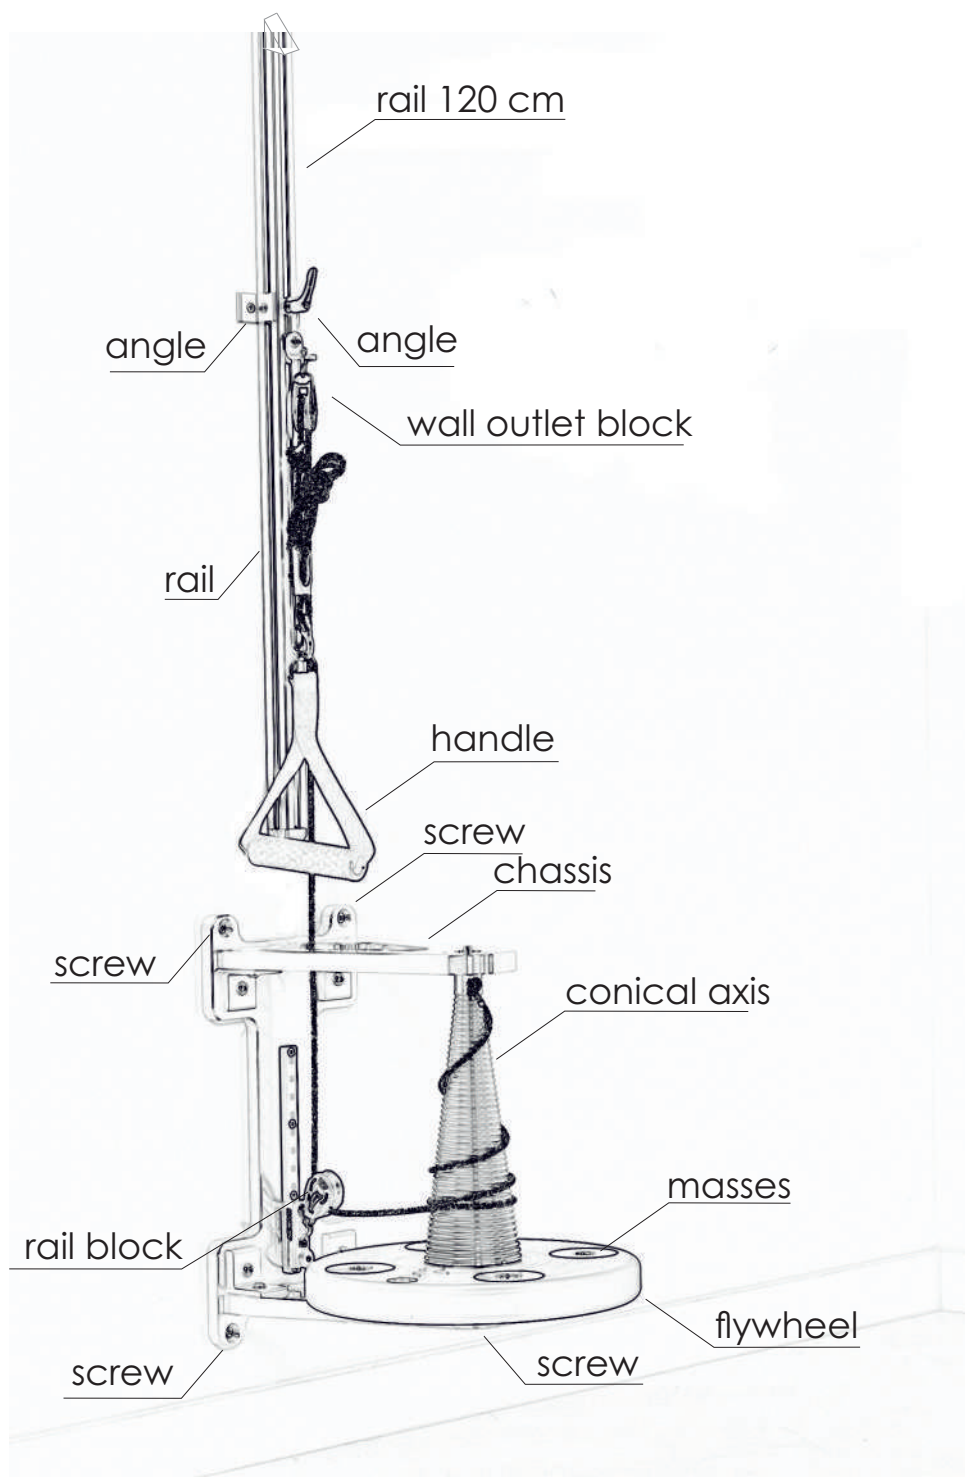

**Place the Machine.**

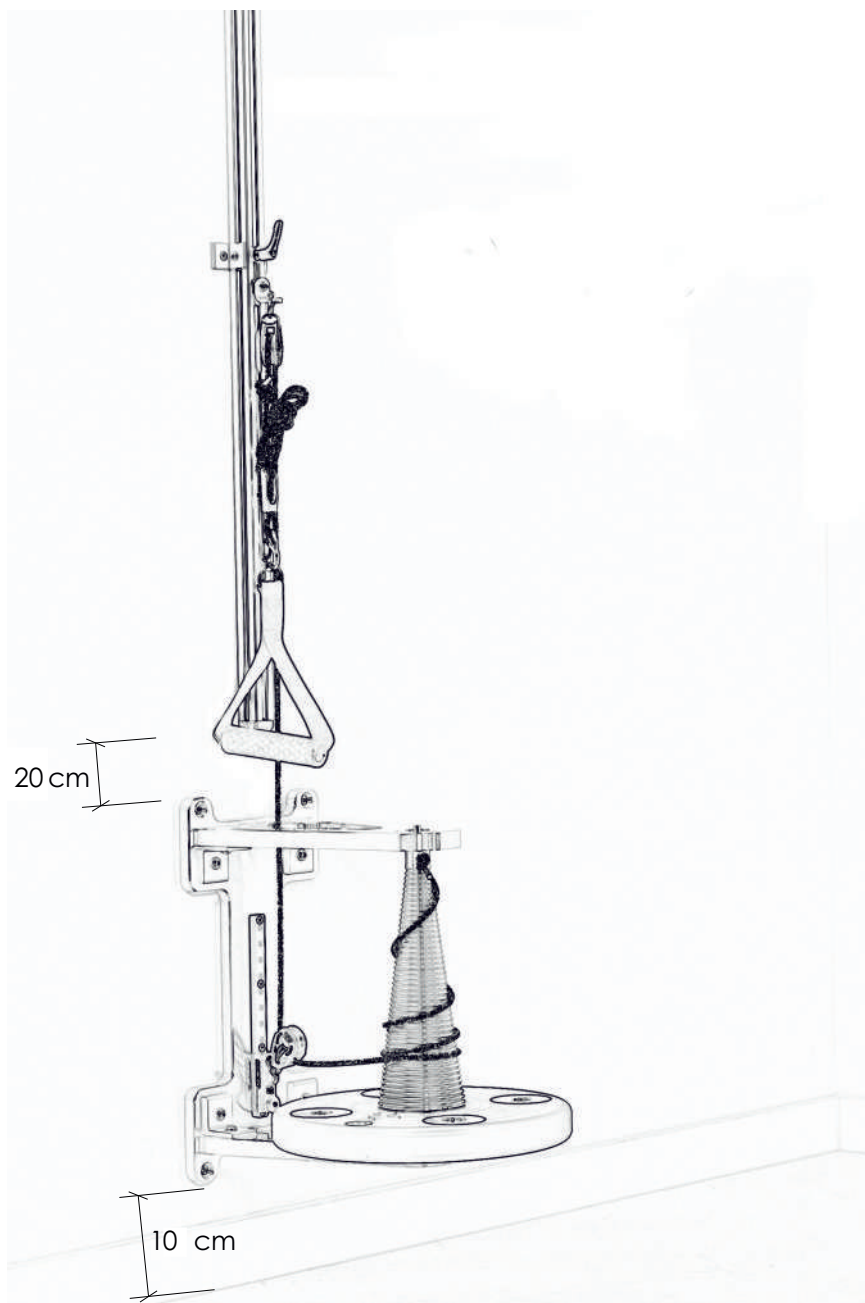

The surface where the machine is placed must be installed on a stable and level base.

Place de machine as close as possible to the ground, if you have baseboards will be placed above it.

The rail of 120 cm is placed centered with the machine and 20 cm of it.

## Set the Machine.




8 mm Ø



\* This mounting (optional) is used to derive the output block to the ground.


## RSP CONIC . Instalation

1.

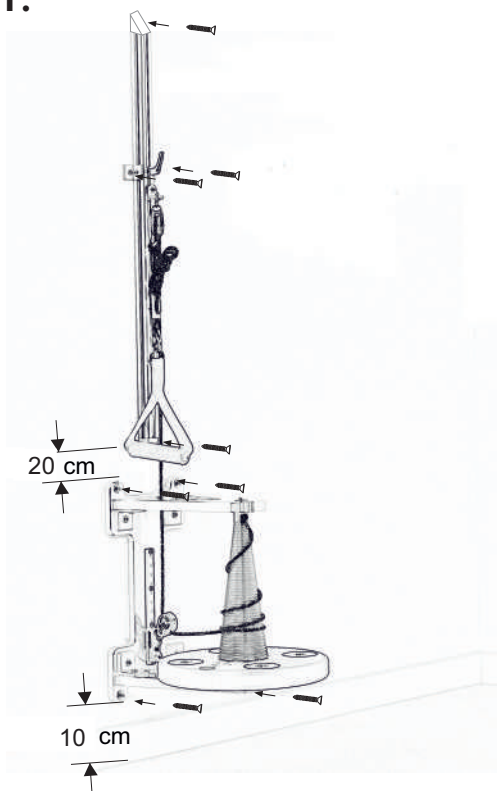

1. Place the machine as close as possible to the ground, if you have baseboards they will be placed above it. The rail of 120 cm is placed centered with the machine and 20 cm of it.

2. Optional block exit from the ground

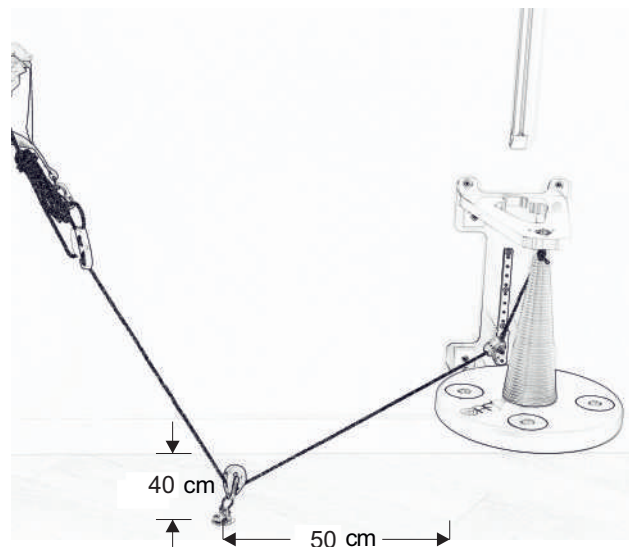

Make four holes in the wall to the indicated height, insert the plugs first and screw the four screws into the wall. Then install the rail to the block of wall outlet to the indicated height, with the indicated plugs and screws.

2. Ground anchoring to have a vertical throw is optional. Place as indicated in the image

## ADJUSTING THE HANDLE POSITION

Click on this link <https://einerical.com/en/machine/rsp-conic/> to see:

The most important technical features of our RSP Conic, how you can assembly it, how the rope is adjusted and how the pulleys and the rope are changed. We also explain how to improve it and give you some useful tips.

## FLYWHEEL MASS

The mass of the flywheel defines a large range of speed/force curves that can be varied  
MASS (Flywheel weight) CHANGE INSTRUCTIONS




Press the bottom up to remove the masses




Without mases. Always take out the masses in pairs.

## How to place the masses

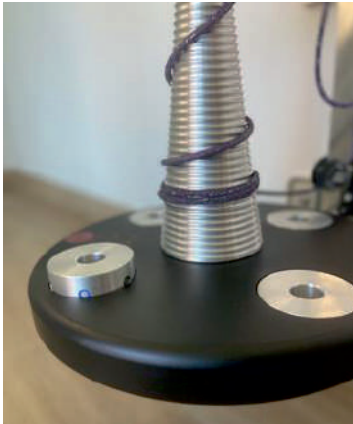

Place the mass right

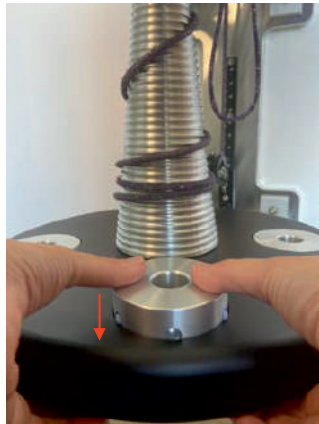

Press up and down




Until it is in line with the flywheel


The RSP conic flywheel comes with four masses to modify the force/speed parameters.

The flywheel has four locations to add or delete steel weights in opposite pairs.


### Placement masses:

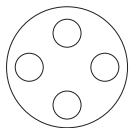

without masses

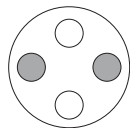


2 masses

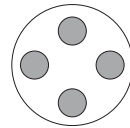

4 masses

**IMPORTANT:** FLYWHEEL WEIGHTS MUST BE ADDED OR DELETED IN PAIRS AND IN DIRECTLY OPPOSITE LOCATIONS

## HOW TO MOVE THE RAIL

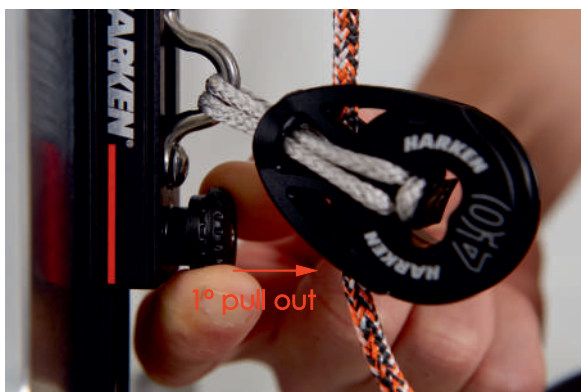

1° Pull out




2° Move up and down




## DIFFERENT ANGLES TO PULL THE ROPE



Wall outlet block

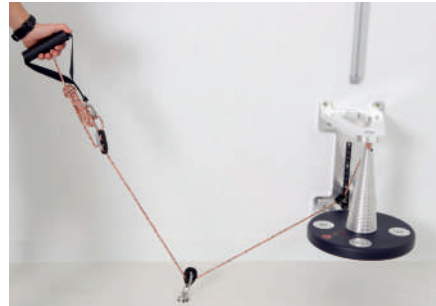

Output block from the ground

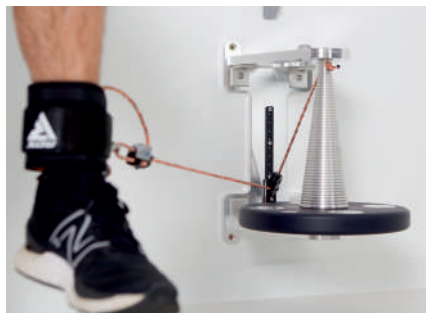

Output of the cone.

## TECHNICAL SPECIFICATIONS

- Designed for precise upper and lower body movements.
- Adjusting the acceleration through the axis radius.
- Adjustment of the moment of inertia through the masses integrated in the disc, each mass represents 10% of the moment of inertia.
- Adjusting the height of the rope output.
- Anchorage for a vertical shot.

**Size:** 45 x 35 x 45 cm high

**Weight:** 14 kg

**Adaptations:** Customization for specific trainings Inertial performance, S.L., with CIF B 27813518 declares that this training equipment is in accordance with the norm EN 957-2, Class S.

### Moments of inertia

without masses	2 masses	4 masses	2 masses Stainless +60%	4 masses Stainless+120%	2 masses stainless/2 alum +80 %
531,39 Kg/cm <sup>2</sup>	635,13 kg/cm <sup>2</sup>	738,86 Kg/cm <sup>2</sup>	829,37 Kg/cm <sup>2</sup>	1126,22 kg/cm <sup>2</sup>	933,11 Kg/cm <sup>2</sup>

## ACCESSORIES

- RSP Encoder
- Stainless steel masses
- High load pulleys (high performance with high working densities)
- Adaptor for Chronojump codificator.
- Portability kit (to fix the machine to a solid structure such as goal, trellis, column..)
- Anchors for attaching the portability kit to a square rack structure.

**Spare parts:** <https://einericial.com/en/categoria-producto/rsp-conic-en/>

## USE

Always tense rope during the execution of the exercise.

Always work with the rope coiled in the axis to avoid to squash the bearings of the blocks.

It's important to do the exercises with a suitable technique and must be supervised by a professional. You can affect the health an excessive or incorrect use of the machine, please consult your doctor before exercising.

It is important to keep the unattended children away from the machine.

The blocks and the ropes are elements of wear by the use of the machine.

RSP recommends the use of his blocks and ropes to guarantee the ideal functioning of the machines.

RSP is not responsible for wear caused by misuse of the machine.

To know the whole gallery of exercises and the safe and proper use of the machine visit:

<https://einericial.com/en/tutorials/>

<https://einericial.com/videos/>

## MAINTENANCE

Clean the machine with a damp cloth without using any abrasive product.


Do not leave machine in very humid places. Indoor use.

Replace the rope if it is worn or broken, the blocks and the ropes are elements of wear by the use of the machine.

**Spare parts:** <https://einerical.com/en/categoria-producto/rsp-conic-en/>

Call for assistance if required. +34 659910685

## REPLACING THE ROPE

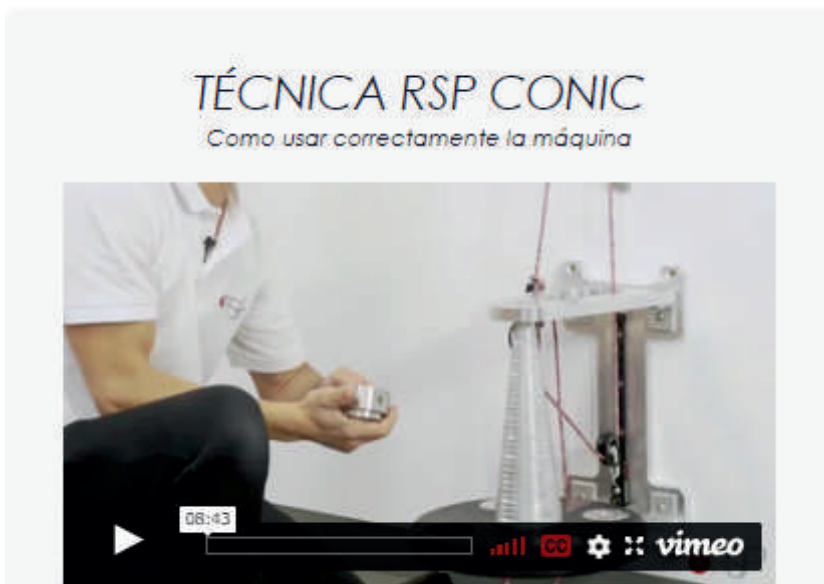

<https://einerical.com/en/machine/rsp-conic/>

## WARRANTY

1. Inercial Performance, S.L. warrants to the purchaser that RSP conic is free of defects in materials and workmanship under normal use and maintenance, has a limited warranty of 2 years from the date of purchase, subject to the terms and conditions that marks the Spanish law, after 6 months of this period the costumer will have to prove that the fault exists since the origin of the purchase.
2. This warranty does not cover any damage caused by handling, misuse, tampering, negligence, accidents, abnormal conditions, lack of adequate maintenance or unauthorized service or alterations to the product.
3. The blocks and the ropes are elements of wear by the use of the machine, are not subject to this warranty except for manufacturing defect.
4. In the event that the machine is damaged from the factory in the first 6 months after the purchase (point 1) will replace the defective part or be replaced the machine, if necessary, without any cost for our client.



**[www.einercial.com](http://www.einercial.com)**

Inercial Performance S.L.

Telf + 34 659 91 06 85  
Spain